



Controller N1200

UNIVERSAL CONTROLLER - INSTRUCTIONS MANUAL - V1.0x

SAFETY ALERTS

The symbols below are used on the equipment and throughout this document to draw the user's attention to important operational and safety information.

CAUTION: Read the manual thoroughly before installing and operating the equipment.	CAUTION OR DANGER: Electrical Shock Hazard

All safety related instructions that appear in the manual must be observed to ensure personal safety and to prevent damage to either the instrument or the system. *If the instrument is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.*

Over-temperature protection

When designing any control system it is essential to consider what will happen if any part of the system should fail. In temperature control applications the primary danger is one in which the heating remains constantly on. In any application where physical injury or destruction of equipment might occur, it is recommend to install an independent protection equipment, with a separate temperature sensor, to disable the heating circuit in case of overheating. Please note that the alarm relays within the controller will not give protection under all failure conditions

INTRODUCTION

The N1200 is an extraordinarily versatile process controller. It holds in one single instrument all the main features needed for the vast majority of industrial processes. It accepts in a single model virtually all the sensors and signals used in the industry and provides the main output types required for the operation of diverse processes.

The instrument setup is carried out through its frontal keypad without any hardware change. Thus, the configuration of the input and output types, the alarms and other functions, are all accessed and programmed via frontal keyboard.

It is important that the users read carefully this manual before using the controller. Verify if the release of this manual matches the instrument version (the firmware version is shown when the controller is energized). The N1200 main characteristics are:

- Multi-sensor universal input;
- Protection for open sensor in any condition;
- Relay, 4-20 mA and logic pulse control outputs all available in the standard model;
- Self-tuning of PID parameters;
- Automatic / Manual function with "bumpless" transfer;

- Two alarm outputs in the basic version, with functions of minimum, maximum, differential (deviation), open sensor and event;
- Timer functions that can be associated to the alarms;
- Retransmission of PV or SP in 0-20 mA or 4-20 mA;
- Input for remote *setpoint*;
- Digital input with 5 functions;
- Programmable *soft-start*;
- 20 setpoint profile programs with 9 segments each, with the ability to be linked together for a total of 180 segments;
- Password for parameters protection;
- Universal power supply.

CONFIGURATION / FEATURES

INPUT TYPE SELECTION

Select the input type (in parameter "TYPE") from Table 1 below.

TYPE	CODE	RANGE OF MEASUREMENT
J	tc J	Range: -110 to 950 °C (-166 to 1742 °F)
K	tc P	Range: -150 to 1370 °C (-238 to 2498 °F)
T	tc t	Range: -160 to 400 °C (-256 to 752 °F)
N	tc n	Range: -270 to 1300 °C (-454 to 2372 °F)
R	tc r	Range: -50 to 1760 °C (-58 to 3200 °F)
S	tc S	Range: -50 to 1760 °C (-58 to 3200 °F)
B	tc b	Range: 400 to 1800 °C (752 to 3272 °F)
E	tc E	Range: -90 to 730 °C (-130 to 1346 °F)
Pt100	Pt	Range: -200 to 850 °C (-328 to 1562 °F)
0-20 mA	LQ20	Linear Signals Programmable indication from -1999 to 9999.
4-20 mA	L420	
0-50 mV	LQ50	
0-5 Vdc	LQ5	
0-10 Vdc	LQ10	
4-20 mA NON LINEAR	Ln J	Non Linear Analog Signals Indication range depends on the selected sensor
	Ln P	
	Ln t	
	Ln n	
	Ln r	
	Ln S	
	Ln b	
Ln E		
	LnPt	

Table 1 - Input types

Note: All input types are factory.

CONFIGURATION OF OUTPUTS, ALARMS AND DIGITAL INPUTS

The controller input and output channels (I/O) can assume multiple functions: control output, digital input, digital output, alarm output, retransmission of PV and SP. These channels are identified as **I/O 1, I/O 2, I/O 3, I/O 4 and I/O 5**.

The basic controller model comes loaded with the following features:

- I/O 1- output to Relay SPST-NA;
- I/O 2- output to Relay SPST-NA;
- I/O 5- current output, digital output, digital input;

Optionally, other features can be added, as shown under the item "Identification" in this manual:

- **3R**: I/O 3 with output to SPDT relay;
- **DIO**: I/O 3 and I/O 4 as digital input and output channels;
- **HBD**: Heater break detect;
- **485**: Serial Communication;

The function to be used in each channel of I/O is defined by the user in accordance with the options shown in the **Table 2**.

FUNCTION OF I/O	CODE	TYPE OF I/O
Without Function	oFF	Output
Output of Alarm 1	R1	Output
Output of Alarm 2	R2	Output
Output of Alarm 3	R3	Output
Output of Alarm 4	R4	Output
Control Output (Relay or Digital Pulse)	ctrL	Output
Automatic / Manual mode selection	ARn	Digital Input
Run / Stop mode selection	run	Digital Input
Remote SP selection	rSP	Digital Input
Setpoint profile program HOLD (Freezes program execution)	HPrg	Digital Input
Setpoint Profile Program 1 selection	Pr 1	Digital Input
0 to 20mA control output selection	C.020	Analogical Output
4 to 20mA control output selection	C.420	Analogical Output
Retransmission of PV in 0 to 20mA	P.020	Analogical Output
Retransmission of PV in 4 to 20mA	P.420	Analogical Output
Retransmission of Sp in 0 to 20mA	S.020	Analogical Output
Retransmission of SP in 4 to 20mA	S.420	Analogical Output

Table 2 - Types of functions for the I/O channels

During the configuration of the I/O channels, only the valid options for each channel will be shown on the display. These functions are described below:

- **oFF** - Without function

The I/O channel programmed with code **oFF** will not be used by the controller. Although without function, this channel is available through the serial communication as digital I/O (command 5 MODBUS).

- **R1, R2, R3, R4** – Alarm Outputs

The selected channel can be used as output to Alarms 1 to 4. Defines that the programmed I/O channel acts as alarm outputs. Available for all the I/O channels.

- **ctrL** – PWM Control Output

Defines the I/O channel to be used as the PWM control output (relay or digital pulse). Available for all the I/O channels. The digital pulse is available on I/O5 (standard) or on I/O3 and I/O4 (when the DIO optional is installed). Check the specifications of each channel.

- **ARn** - Digital Input with Auto/Manual function

Defines the I/O channel as Digital Input with the function of switching the control mode between **Automatic and Manual**. Available on I/O5 (standard) or on I/O3 and I/O4 (when the DIO optional is installed).

Closed = Manual control;
Open = Automatic control

- **run** - Digital Input with RUN function

Defines channel as Digital Input with the function of enabling/disabling the control and alarm outputs ("**run**": **YES / no**). Available for I/O5 or I/O3 and I/O4, when installed.

Closed = outputs enabled

Open = control and alarms output shut off.

- **rSP** - Digital Input with Remote SP function

Defines channel as Digital Input with the function of selecting the remote SP as the control setpoint. Available for I/O5 or I/O3 and I/O4, when available.

Closed = remote SP

Open = uses main SP

- **HPrg** - Digital Input with Hold Program function

Defines channel as Digital Input with the function of commanding the execution of the selected setpoint profile **program**. Available for I/O5 or I/O3 and I/O4, when available.

Closed = Enables execution of the program

Open = Interrupts (freezes) execution of the program

Note: Even when the execution of the program is interrupted, the control output remains active and controlling the process at the point (Setpoint) of interruption. The program will resume its normal execution starting from this same point when the digital input is closed.

- **Pr 1** - Digital Input with function to Execute Program 1

Defines the IO channel as Digital Input with the function of commanding the execution of the setpoint profile **program 1**. Available for I/O5 or I/O3 and I/O4, when available.

Useful function for switching between the main *setpoint* and a secondary one defined by the **program 1**.

Closed = selects program 1;

Open = selects main *setpoint*

- **Pr 2** - Digital Input with function to Execute Program 1

Defines the IO channel as Digital Input with the function of commanding the execution of **program 2**. Available for I/O5 or I/O3 and I/O4, when available.

Useful function for switching between the main *setpoint* and a secondary one defined by **program 2**.

Closed = selects program 1;

Open = selects main *setpoint*

- **Pr 3** - Digital Input with function to Execute Program 1

Defines the IO channel as Digital Input with the function of commanding the execution of **program 3**. Available for I/O5 or I/O3 and I/O4, when available.

Useful function for switching between the main *setpoint* and a secondary one defined by **program 3**.

Closed = selects program 1;

Open = selects main *setpoint*

- **C.020** -0-20 mA Control Output

Available for I/O 5 only, defines the channel as a 0-20 mA control output.

- **C.420** - 4-20 mA Control Output

Defines the channel as a 4-20 mA control output.

- **P.020** -0-20 mA PV retransmission

Available for I/O 5 only, configures the channel to retransmit the values of PV in 0-20 mA.

- **P.420** - 4-20 mA PV retransmission

Available for I/O 5 only, configures the channel to retransmit the values of PV in 4-20 mA.

- **S.020** 0-20 mA SP (Setpoint) retransmission

Available for I/O 5 only, configures the channel to retransmit the values of SP in 0-20 mA.

- **S.420** 4-20 mA SP (Setpoint) retransmission

Available for I/O 5 only, configures the channel to retransmit the values of SP in 0-20 mA.

CONFIGURATION OF ALARMS

The controller has 4 independent alarms. These alarms can be configured to operate with nine different functions, as shown in **Table 3**.

- **oFF** – Alarms turned **oFF**.

- **iErr** – Open Sensor alarms - (*Loop Break*)

The open sensor alarm acts whenever the input sensor is broken or badly connected.

- **rS** –Program Event Alarm

Configures the alarm to act in (a) specific segment(s) of the programs of ramps and baselines to be created by the user.

- **rFA.i** – Burnt-out Resistance Alarm - (*Heat Break*)

Signals that the heating element has broken up. This alarm function requires the accessory Current transformer CT1. Details for use of the option “burnt-out resistance” are found in the specific documentation that accompanies the product whenever this option is requested.

- **Lo** – Alarm of Absolute Minimum Value

Triggers when the value of measured PV is **below** the value defined for alarm Setpoint.

- **Hi** – alarm of Absolute Maximum Value

Triggers when the value of measured PV is **above** the value defined for alarm *Setpoint*.

- **dIF** – Alarm of Differential Value

In this function the parameters “**SPA1**”, “**SPA2**”, “**SPA3**” and “**SPA4**” represent the Deviation of PV in relation to the SP.

Using the Alarm 1 as example: for Positive SPA1 values, the Differential alarm triggers when the value of PV is **out** of the range defined for:

$$(SP - SPA1) \text{ to } (SP + SPA1)$$

For a negative SPA1 value, the Differential alarm triggers when the value of PV is **within** the range defined above:

- **dIFL** – Alarm of Minimum Differential Value

It triggers when the value of PV is below the defined point by:

$$(SP - SPA1)$$

Using the Alarm 1 as example.

- **dIFH** – Alarm of Maximum Differential Value

Triggers when the value of PV is **above** the defined point by:

$$(SP + SPA1)$$

SCREEN	TYPE	ACTUATION
oFF	Inoperative	Output is not used as alarm.
iErr	Open sensor (input Error)	Activated when the input signal of PV is interrupted, out of the range limits or Pt100 in short-circuit.
rS	Event (ramp and Soak)	Activated in a specific segment of program.
rFA IL	Resist. burnt out (resistance fail)	Signals a failure in the heating element.
Lo	Minimum value (Low)	
Hi	Maximum value (High)	
dIF	Differential (diFerential)	
dIFL	Minimum Differential (diFerential Low)	
dIFH	Maximum differential (diFerential High)	

Table 3 – Alarm Functions

Where SPAn refers to Setpoints of Alarm “**SPA1**”, “**SPA2**”, “**SPA3**” and “**SPA4**”.

ALARM TIMER MODES

The N1200 alarms can be configured to perform 3 timer modes:

- One pulse with defined duration;
- Delayed activation;
- Repetitive pulses;

The illustrations in **Table 4** show the behavior of the alarm output for various combinations of times t1 and t2. The timer functions can be configured in parameters **A1E1**, **A1E2**, **A2E1**, **A2E2**, **A3E1**, **A3E2**, **A4E1** and **A4E2**.

OPERATION	T 1	T 2	ACTION
Normal Operation	0	0	
Activation for a defined time	1 to 6500 s	0	
Activation with delay	0	1 to 6500 s	
Intermittent Activation	1 to 6500 s	1 to 6500 s	

Table 4 – Temporization Functions for the Alarms

The LEDs associated to the alarms will light when the alarm condition is recognized, not following the actual state of the output, which may be temporarily OFF because of the temporization.

INITIAL BLOCKING OF ALARM

The initial blocking option inhibits the alarm from being recognized if an alarm condition is present when the controller is first energized (or after a transition from run YES →NO). The alarm will be enabled only after the occurrence of a non alarm condition followed by a new occurrence for the alarm.

The initial blocking is useful, for instance, when one of the alarms is configured as a minimum value alarm, causing the activation of the alarm soon upon the process start-up, an occurrence that may be undesirable.

The initial blocking is disabled for the sensor break alarm function.

EXTRACTION OF THE SQUARE ROOT

With this feature enabled the controller uses for display and control a value that corresponds to the square root of the applied input signal.

Available only for the inputs belonging to the group of linear analogic signals: 0-20 mA, 4-20 mA, 0-50 mV, 0-5 V and 0-10 V.

ANALOG RETRANSMISSION OF PV AND SP

The analog output, when not used for control purposes, is available for retransmitting the PV and SP values in 0-20 or 4-20 mA. This analog output is electrically isolated from other inputs and outputs.

The analog output signal is scaleable, with the output range defined by the values programmed in the parameters "rELL" and "rEHL".

To obtain a voltage output, the user must install a resistor shunt (550 Ω max.) to the current output terminals (terminals 7 and 8). The actual resistor value depends on the desired output voltage span.

SOFT-START

The soft-start feature avoids abrupt variations in the power delivered to the load regardless of the system power demand.

This is accomplished by defining a limiting ramp for the control output. The output is allowed to reach maximum value (100 %) only after the time programmed in the soft-start parameter has elapsed. The Soft-start function is generally used in processes that require slow start-up, where the instantaneous application of 100% of the available power to the load may cause damages to parts of the system.

In order to disable this function, the soft-start parameter must be configured with 0 (zero).

REMOTE SETPOINT

The controller can have its Setpoint value defined by an analog, remotely generated signal. This feature is enabled through the channels I/O3, I/O4 or I/O5 when configured as digital inputs and configured with the function rSP (Remote SP selection) or through the parameter E_rSP. The remote setpoint input accepts the signals 0-20 mA, 4-20 mA, 0-5 V and 0-10 V.

For the signals of 0-20 and 4-20 mA, a shunt resistor of 100 Ω is required between terminals 9 and 10, as shown in Figure 4c.

CONTROL MODE

The controller can operate in two different manners: Automatic mode or Manual mode. In automatic mode the controller defines the amount of power to be applied on the process, based on defined parameters (SP, PID, etc.).

In the manual mode the user himself defines this amount of power. The parameter "Ctrl" defines the control mode to be adopted.

PID AUTOMATIC MODE

For the Automatic mode, there are two different strategies of control: PID control and ON/OFF control.

PID control has its action based on a control algorithm that takes into account the deviation of PV with respect to SP, the rate of change of PV and the steady state error.

On the other hand, the ON/OFF control (obtained when Pb=0) operates with 0% or 100% of power, when PV deviates from SP.

The determination of the PID parameters (Pb, Ir and Dt) is described in the item DETERMINATION OF PID PARAMETERS of this manual.

INSTALLATION / CONNECTIONS

The controller must be fastened on a panel, following the sequence of steps described below:

- Prepare a panel cut-out of 45.5 x 45.5 mm ;;
- Remove the mounting clamps from the controller;
- Insert the controller into the panel cut-out ti;
- Slide the mounting clamp from the rear to a firm grip at the panel.

RECOMMENDATIONS FOR THE INSTALLATION

- All electrical connections are made to the screw terminals at the rear of the controller. They accept wire sizes from 0.5 to 1.5 mm2 (16 to 22 AWG). The terminals should be tightened to a torque of 0.4 Nm (3.5 lb in)
- To minimize the pick-up of electrical noise, the low voltage DC connections and the sensor input wiring should be routed away from high-current power conductors. If this is impractical, use shielded cables. In general, keep cable lengths to a
- All electronic instruments must be powered by a clean mains supply, proper for instrumentation.
- It is strongly recommended to apply RC'S FILTERS (noise suppressor) to contactor coils, solenoids, etc.
- In any application it is essential to consider what can happen when any part of the system fails. The controller features by themselves can not assure total protection.

ELECTRICAL CONNECTIONS

The controller's internal circuits can be removed without undoing the connections on the back panel.

The controller complete set of features is drawn in Figure 1. The features loaded in a particular unit are shown on its label

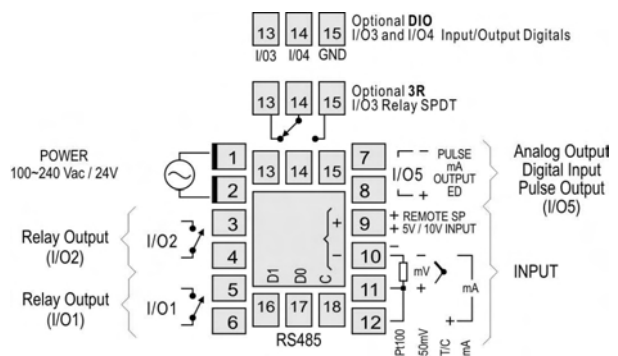


Figure 1 - Connections of the back panel

Power Supply Connections

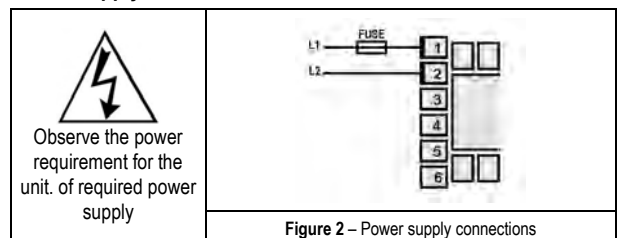


Figure 2 - Power supply connections


Input Connections

- Thermocouple (T/C) and 0-50 mV

The **Figure 3a** indicates the wiring for the thermocouple and 0-50mV signals. If the thermocouple wires needs to be extended, use appropriate compensation cables.


- RTD (Pt100):

Figure 3b shows the Pt100 wiring, for 3 conductors. For proper cable length compensation, use conductors of same gauge and length). For 4-wires Pt100, leave one conductor disconnected at the controller. For 2-wire Pt100, short-circuit terminals 11 and 12.

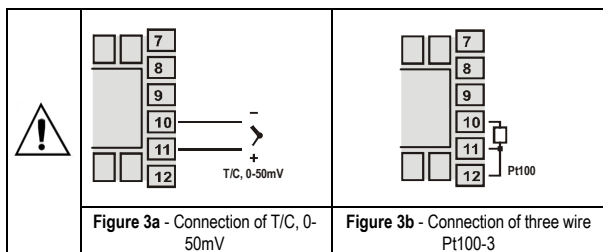

- 4-20 mA:

The connections for current signals 4-20 mA must be carried-out according to **Figure 4a**.

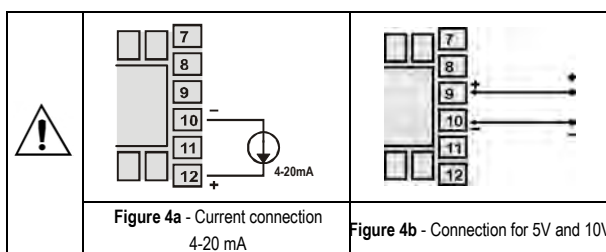


- 5 V and 10 V

Refer to **Figure 4b**.for connecting voltage signals.


Remote Setpoint

Feature available in the controller's terminals 9 and 10. When the Remote SP input signal is 0-20 mA or 4-20 mA, an external **100Ω** shunt resistor of must be connected to terminals 9 and 10 as indicated in **Figure 4c**.

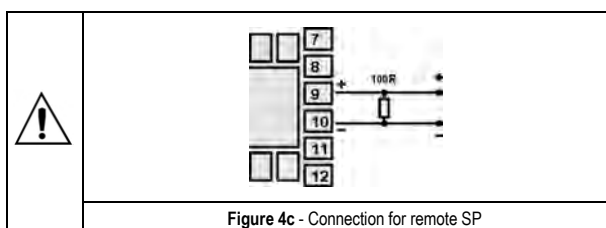


Digital Input Connections

Figures 5a and 5b show switches driving I/O 3 and I/O 5. The same scheme applies to I/O 4

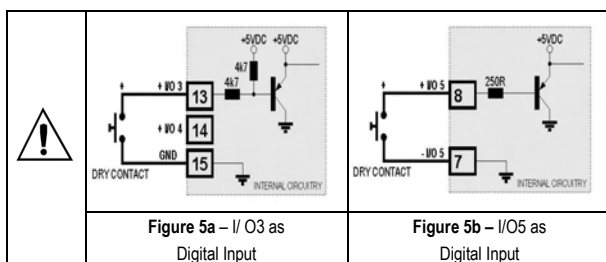

Connection of Alarms and Outputs

The I/O channels, when configured as outputs, must have their load limit capacities observed, according to the product specifications.

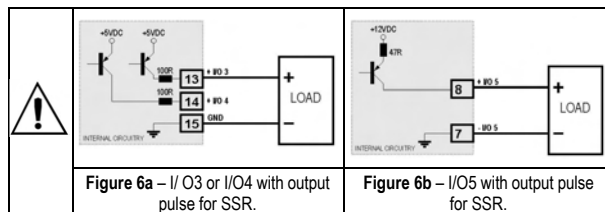

I/O3, I/O4 and I/O5 can also be configured as digital outputs (I/O3 and I/O4 provide a 5 Vdc output signal whereas I/O5 a 12 Vdc signal). An example of usage is shown in **Figure 6a** for the I/O3 and in **Figure 6b** for the I/O5. I/O5 is electrically isolated from the sensor input

OPERATION

The controller's front panel, with its parts, can be seen in the **Figure 7**:

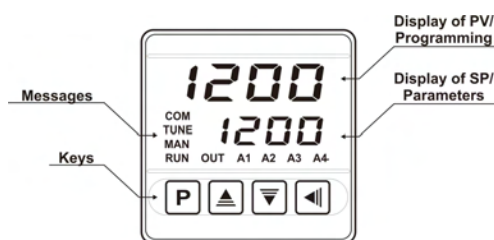


Figure 7 - Identification of the parts referring to the front panel

Display of PV/Programming: Displays the current value of PV (*Process Variable*). When in configuration mode, it shows the parameters names.

Display of SP/Parameters: Displays the value of SP (*Setpoint*). When in configuration mode, it shows the parameters values.

COM indicator: Flashes to indicate communication activity in the RS485 interface.

TUNE indicator: Stays ON while the controller is in tuning process.

MAN indicator: Signals that the controller is in the manual control mode.

RUN indicator: Indicates that the controller is active, with the control output and alarms enabled.

OUT indicator: For relay or pulse control output; it reflects the actual state of the output. If an analog output is assigned for control, the OUT indicator lights continuously.

A1, A2, A3 and A4 indicators: signalize the occurrence of alarm situation.

[P] P Key (Program key): used to walk through the menu parameters.

[Left Arrow] Back Key: used to retrocede parameters.

[Up Arrow] Increment key and [Down Arrow] - Decrement key: allow altering the values of the parameters.

When the controller is turned on, its firmware version is delayed for 3 seconds, after which the controller starts normal operation. The values of PV and SP are displayed and the outputs are enabled

In order to operate appropriately, the controller needs a configuration that is the definition of each one of the several parameters presented by the controller. The user must be aware of the importance of each parameter and for each one determine a valid condition or a valid value.

Note: Since many parameters depend on the input type chosen, it is recommended that the parameter **TYPE** be the first one to be configured.

The parameters are grouped in levels according to their functionality and operation easiness. The 7 levels of parameters are:

LEVEL	ACCESS
1 - Operation	Free access
2 - Tuning	Reserved access
3- R&S Programs	
4- Alarms	
5- Input configuration	
6- I/Os	
7- Calibration	

Table 5 – Cycles of Parameters

The parameters in the operation level have easy access through the key **P**. The access deeper levels use the combination of keys:

◀ (BACK) and P (PROG) pressed simultaneously

Press **P** to advance or **◀** to retrocede parameters within a level. At the end of each level, the controller returns to the operation level. Keep pressing the **P** key to move fast forward in the level.

Alternatively, the controller returns to the operation level after pressing the **◀** key for 3 seconds

All configuration parameters are stored in protected memory. The values are saved when the keys **P** or **◀** are pressed after changing a parameter value. The value of SP is saved upon pressing the **P** key or every 25 seconds.

DESCRIPTION OF THE PARAMETERS

OPERATION CYCLE

To access the operation level parameters, press **P** until the desired parameter is displays.

PV Indication (Red Screen)	IPV and SP indication – The upper display shows the current value of PV. The lower display shows the control SP value.
SP Indication (Green Screen)	
Ctrl Control	Control Mode: auto - Means automatic control mode. MAN – Means manual control mode. (bumpless transfer between automatic and manual control modes).
PV Indication (Red Screen)	MANIPULATED VARIABLE VALUE (MV): The upper display shows PV value and the lower display shows the percentage of MV applied to the control output. When in manual control, the MV value can be manually changed by the ▲ and ▼ keys. When in auto mode the MV value can only be viewed. To distinguish the MV display from the SP display, the MV is shown flashing intermittently.
MV Indication (Green Screen)	
EP Enable Program	Execution of Program - Selects the ramp and soak profile program to be executed. 0 - does not execute program 1 to 20 number of the program to be executed With enabled outputs (RUN = YES), the program starts right after the program is selected.
P.SEG	Screen for indication only. When a ramp and soak program is active, this parameter shows the number of the segment under execution, from 1 to 9.
t.SEG	Screen for indication only. When a ramp and soak program is in execution, it shows the remaining time to the end of the current segment, in units of time configured in the Pr.tb parameter.
run	Enables control outputs and alarms. YES - Outputs enables. no - Outputs not enabled.

CYCLE OF TUNING

Atun Auto-tune	Defines the control strategy to be taken: oFF – Turned off. (no PID tuning) FAST – FAST automatic tuning. FULL –More accurate automatic tuning. SELF – Precise + auto - adaptative tuning rSLF –Forces <u>one</u> new precise automatic precise + auto - adaptative tuning. tGht - Forces <u>one</u> new precise automatic + auto - adaptative tuning when Run = YES or controller is turned on.
Pb Proportional Band	PROPORTIONAL BAND - Value of the term P of the control mode PID, in percentage of the maximum span of the input type. Adjust of between 0 and 500.0 %. Select zero for ON/OFF control.
Ir Integral Rate	INTEGRAL RATE - Value of the term I of the PID algorithm, in repetitions per minute (Reset). Adjustable between 0 and 99.99. Displayed only if proportional band ≠ 0.
dt Derivative Time	DERIVATIVE TIME - Value of the term D of the control mode PID, in seconds. Adjustable between 0 and 300.0 seconds. Displayed only if proportional band ≠ 0.
ct Cycle Time	Pulse Width Modulation (PWM) period in seconds. Adjustable between 0.5 and 100.0 seconds. Displayed only if proportional band ≠ 0.
HYSt Hysteresis	CONTROL HYSTERESIS (in engineering. units): This parameter is only shown for ON / OFF control (Pb=0). Adjustable between 0 and the measurement input type span.
Act Action	CONTROL ACTION: For Auto Mode only. rE Control with reverse Action. Appropriate for heating . Turns control output on when PV is below SP. dIr Control with direct Action. Appropriate for cooling . Turns control output on when PV is above SP.
bIAS	BIAS: Offset for MV (manual reset). Range: -100 % to +100 %. Allows adding a percentage value between -100% and +100 % to the MV control output The value 0 (zero) disables the function.
ouLL Output Low Limit	Lower limit for the control output - Minimum percentage value assumed by the control output when in automatic mode and in PID. Typically configured with 0 %. Default value: 0 %
ouHL Output High Limit	Upper limit for the control output - Maximum percentage for the control output when in automatic mode and in PID. Typically configured with 100 %. Default value: 100 %
SFS Softstart	SoftStart Function –: Time in seconds during which the controller limits the MV value progressively from 0 to 100 %. It is enabled at power up or when the control output is activated. If in doubt set zero (zero value disables the Soft start function).

SPA1 SPA2 SPA3 SPA4	<p>ALARM SETPOINT: Tripping point for alarm 1, 2, 3 and 4. Value that defines the point of activation for the programmed alarms with the functions "Lo" or "Hi".</p> <p>For the alarms configured with Differential type functions, this parameter defines deviation (band). Not used for the other alarm functions.</p>
--	---

CYCLE OF PROGRAMS

Prtb <i>Program time base</i>	<p>Defines the time base that will be used by all Ramp & Soak programs.</p> <p>SEC - Time basis in seconds; min - Time basis in minutes;</p>
Pr n <i>Program number</i>	<p>Selects the ramp and soak profile program to be edited/viewed. The sequence of parameters that follows refer to this selected program. Total of 20 programs possible.</p>
Ptol <i>Program Tolerance</i>	<p>Maximum admitted deviation of PV with respect to SP. If exceeded, the program execution is suspended (the internal timer freezes) until the deviation be returns back within the defined tolerance.</p> <p>The value 0 (zero) disables the function (the program progresses regardless of the difference between PV and SP).</p>
PSP0 PSP9 <i>Program SP</i>	<p>Program SP's, 0 to 9: Group of 10 values of SP that define the Ramp and Soak profile segments.</p>
Pt1 Pt9 <i>Program Time</i>	<p>Segments durations, 1 to 9: Defines the time of duration, in second or minutes, of the segments of the program being edited.</p>
PE1 PE9 <i>Program event</i>	<p>Alarms of Event, 1 to 9: Parameters that define which alarms are to be activated during the execution of a certain program segment. The alarms chosen must have its function configured as "rS." (See Table 3)</p>
LP <i>Link Program</i>	<p>Link Programs: Number of the next profile program to be linked following the current program. Profiles can be linked together to produce larger programs of up to 180 segments.</p> <p>0 – do not link to any other program.</p>

CYCLE OF ALARMS:

FJA1 FJA2 FJA3 FJA4 <i>Function Alarm</i>	<p>FUNCTIONS OF ALARMS 1 to 4. Defines the functions for the alarms among the options of the Table 3.</p> <p>oFF, iErr, rS, rFAIL, Lo, Hi, dIFL, dIFH, dIF</p>
bLA1 bLA2 bLA3 bLA4 <i>Blocking Alarm</i>	<p>ALARM BLOCK 1 TO 4: This function blocks the alarms when the controller is energized.</p> <p>YES - enables initial blocking no - inhibits initial blocking</p> <p>When enabled, the alarm will not be active at power-up, waiting for PV (Process Variable) to reach a non-alarm situation. From this point on the alarm will be free to actuate should a new alarm situation occur.</p>
HYA1 HYA2 HYA3 HYA4 <i>Hysteresis of Alarm</i>	<p>ALARM HYSTERESIS: Defines the difference between the value of PV at which the alarm is triggered and the value at which it is turned off (in engineering units).</p>

A1t1 A2t1 A3t1 A4t1 <i>Alarm Time t1</i>	<p>Defines the temporization time t1, in seconds, for the alarms. Defines the temporization time t1, in seconds, for the alarms time functions. The value 0 (zero) disables the function.</p> <p>Refer to Table 4 for configuring this parameter timed functions. The value 0 (zero) disables the function.</p> <p>Refer to Table 4 for configuring this parameter.</p>
A1t2 A2t2 A3t2 A4t2 <i>Alarm Time t2</i>	<p>Defines the temporization time t2, in seconds, for the alarms time functions.</p> <p>The value 0 (zero) disables the function.</p> <p>Refer to Table 4 for configuring this parameter</p>
FLSh <i>Flash</i>	<p>Allows visual signalization of an alarm occurrence by flashing the indication of PV in the operation level. The user chooses which alarms are to be associated with this feature.</p>

CYCLE OF SCALE



TYPE <i>Type</i>	<p>INPUT TYPE: Selects the input signal type to be connected to the process variable input. Refer to Table 1 for the available options.</p>
FLtr <i>Filter</i>	<p>Digital Input Filter - Used to improve the stability of the measured signal (PV). Adjustable between 0 and 20. In 0 (zero) it means filter turned off and 20 means maximum filter. The higher the filter value, the slower is the response of the measured value.</p>
dPPO <i>Decimal Point</i>	<p>Selects the decimal point position to be viewed in both PV and SP.</p>
unit <i>Unit</i>	<p>TEMPERATURE INDICATION IN °C OR °F:</p> <p>Defines the temperature unit to be used: Celsius "°C" or Fahrenheit "°F"</p> <p>Parameter displayed when using temperature sensors.</p>
root <i>Square Root</i>	<p>Square Root Function. Applies the quadratic function on the input signal, within the limits programmed in "SPLL" and "SPHL."</p> <p>YES Enables the Function no Does not enable the Function</p> <p>The indication assumes the lower limit value when the input signal is below 1 % of programmed span. Parameter available for lineal inputs only.</p>
OFFS <i>Offset</i>	<p>SENSOR OFFSET: Offset value to be added to the PV reading to compensate sensor error.</p> <p>Default value: zero.</p>
ERSP <i>Enable Remote SP</i>	<p>Enables remote SP.</p> <p>YES Enables the Function no Does not enable the Function</p> <p>This parameter is not displayed when the remote SP selection is defined by a Digital Input.</p>
rSP <i>Remote SP type</i>	<p>Defines the signal type for the remote SP.</p> <p>0-20 current of 0-20 mA 4-20 current of 4-20 mA 0-5 voltage of 0-5 V 0-10 voltage of 0-10 V</p> <p>Parameter displayed when remote SP is enabled.</p>

rSLL Remote SP Low Limit	REMOTE SETPOINT LOW LIMIT: used in conjunction with the rSHL , scales the remote SP input defining the initial value in the remote SP indication range Parameter displayed when remote SP is enabled.
rSHL Remote SP High Limit	REMOTE SETPOINT HIGH LIMIT: defines the full scale indication of the Remote Setpoint Parameter displayed when remote SP is enabled.
SPLL Setpoint Low Limit	Defines the SP lower limit of. - Linear inputs: Sets the lower range for SP and PV indication. - T/C and Pt100 inputs: sets the lower range for SP only.
SPHL Setpoint High Limit	Defines the upper limit for adjustment of SP. - Linear inputs: Sets the upper range for SP and PV indication. - T/C and Pt100 inputs: sets the upper range for SP only.
rELL Retransmission Low Limit	In association with the rEHL parameter, it defines the analog retransmission scale for PV or SP. The rELL represents the minimum scale value for the analog output This parameter is displayed only if the analog retransmission is selected in the I/O 5 parameter (I/O level).
rEHL Retransmission High Limit	Defines the full scale value for the analog retransmission of PV or SP. This parameter is displayed only when the analog retransmission is selected in the I/O 5 parameter (I/O level).
bAud Baud Rate	Digital communication <i>Baud Rate</i> selection, in kbps 1.2, 2.4, 4.8, 9.6, 19.2, 38.4, 57.6 and 115.2
Prty Parity	Parity of the serial communication. none Without parity Even Even parity Odd Odd parity
Addr Address	SLAVE ADDRESS SELECTION: Identifies the controller in the network. The possible address numbers are from 1 to 247.

CYCLE OF I/OS (INPUTS AND OUTPUTS)

I 1	Function of the channel I/O 1: Selection of the function used in the channel I/O 1, according to the Table 2 .
I 2	Function of the channel I/O 2: Selection of the function used in the channel I/O 2, according to the Table 2 .
I 3	Function of the channel I/O 3: Selection of the function used in the channel I/O 3, according to the Table 2 .
I 4	Function of the channel I/O 4: Selection of the function used in the channel I/O 4, according to the Table 2 .
I 5	Function of the channel I/O 5: Selection of the function used in the channel I/O 5, according to the Table 2 .

CALIBRATION CYCLE

All of the input and output types are calibrated in the factory. If a recalibration is required, this should be carried out by a experienced personnel. If this cycle is accidentally accessed, pass through all the parameters without pressing the  or  keys

PASS Password	Input of the Access Password. This parameter is presented before the protected cycles. See item Protection of Configuration .
InLC Input Low Calibration	See section MAINTENANCE / Input Calibration. Enter the value corresponding to the low scale signal applied to the analog input.
InHC Input High Calibration	See section MAINTENANCE / Input Calibration. Enter the value corresponding to the full scale signal applied to the analog input.
rSLC Remote SP Low Calibration	See section: MAINTENANCE / Input Calibration Enter the value corresponding to the low scale signal applied to the remote SP input.
rSHC Remote SP High Calibration	See section: MAINTENANCE / Input Calibration. Enter the value corresponding to the full scale signal applied to the remote SP input.
OutLC Output Low Calibration	See section MAINTENANCE / Analog output Calibration. Enter the analog value as measured at the analog output.
OutHC Output High Calibration	See section MAINTENANCE / Analog output Calibration. Enter the analog value as measured at the analog output.
CJ Cold Junction	Adjusts the of cold junction temperature value.
HTYP Hardware Type	Parameter that informs the controller about the hardware optionals installed. It should not be altered by the user, except when an accessory is introduced or removed. 0 – Basic model. Without optional items 1 – 485 2 – 3R 3 – 3R + 485 4 – DIO 5 – DIO + 485 8 – HBD 9 – HDB + 485
PASC Password	Allows defining a new access password, always different from zero.
Prot Protection	Sets up the Level of Protection. See Table 6 .
FrEq Frequency	Mains frequency. This parameter is important for proper noise filtering.
rStr Restore	Restores the factory calibration for all inputs and outputs, disregarding modifications carried out by the user.

OPERATION CYCLE	TUNING CYCLE	PROGRAMMING CYCLE	ALARM CYCLE	CONFIGURATION CYCLE	I/O CYCLE
PV and SP	<i>Rtun</i>	<i>tbAS</i>	<i>FuA1 - FuA4</i>	<i>tYPE</i>	<i>Io1</i>
<i>Ruto</i>	<i>Pb</i>	<i>Pr n</i>	<i>bLA1 - bLA4</i>	<i>FLt r</i>	<i>Io2</i>
PV and MV	<i>hYSt</i>	<i>PtoL</i>	<i>HYA1 - HYA4</i>	<i>dPPo</i>	<i>Io3</i>
<i>Pr n</i>	<i>lr</i>	<i>PSP0 - PSP9</i>	<i>AIt1</i>	<i>un It</i>	<i>Io4</i>
<i>r un</i>	<i>dt</i>	<i>Pt1 - Pt9</i>	<i>AIt2</i>	<i>oFFS</i>	<i>Io5</i>
	<i>ct</i>	<i>PE1 - PE9</i>	<i>A2t1</i>	<i>SPLL</i>	
	<i>ACt</i>	<i>LP</i>	<i>A2t2</i>	<i>SPHL</i>	
	<i>b iAS</i>			<i>rSLL</i>	
				<i>rSHL</i>	
				<i>bAud</i>	
				<i>Raddr</i>	



Table 6 – All the Controller's Parameters

EXPRESS CYCLE – FAST CONFIGURATION

The Express Cycle provides the operator with fast and direct access to the controller's main parameters, allowing a convenient initial configuration for the instrument. After going through this sequence of selected parameters, the controller will be ready for operation. Have in mind that this cycle provides a simple configuration, although enough for starting up a system. Further configuration will be necessary for accessing all the controller features. The parameters in this cycle are shown below.

EXPRESS CYCLE
<i>tYPE</i>
* <i>dPPo</i>
* <i>un It</i>
* <i>SPLL</i>
* <i>SPHL</i>
<i>Rtun</i>
<i>ACt</i>
<i>FuA1</i>
<i>SPA1</i>
<i>FuA2</i>
<i>SPA2</i>
<i>Io1</i>
<i>Io2</i>
<i>Io5</i>
* <i>rSP</i>
* <i>rSLL</i>
* <i>rSHL</i>
* <i>rLLL</i>
* <i>rLHL</i>
* <i>ct</i>

* Some parameters are context driven and may not be presented depending on the configuration of other parameters.

In order to access this cycle, press the  and  keys simultaneously:

PROTECTION OF CONFIGURATION

The controller provides means for protecting the parameters configurations, not allowing modifications to the parameters values, avoiding tampering or improper manipulation.

The parameter **Protection (Prot)**, in the Calibration level, determines the protection strategy, limiting the access to particular levels, as shown by the table below.

PROTECTION LEVEL	PROTECTED CYCLES
1	Only the Calibration level is protected.
2	I/Os and Calibration levels.
3	Tuning, I/Os and Calibration levels.
4	Alarm, Tuning, I/Os and Calibration levels.
5	Programs, Alarm, Tuning, I/Os and Calibration levels.
6	Tuning, Programs, Alarm, Input, I/Os and Calibration levels.
7	Operation (except SP), Tuning, Programs, Alarm, input, I/Os and Calibration levels.
8	Operation (except SP), Tuning, Programs, Alarm, Input, I/Os and Calibration levels.

Table 7 – Levels of Protection for the Configuration

Access Password:

The protected levels, when accessed, request the user to provide the **Access Password** for granting permission to change the configuration of the parameters on these cycles.

The prompt **PASS** precedes the parameters on the protected levels. If no password is entered, the parameters of the protected cycles can only be visualized.

The Access Code is defined by the user in the parameter **Password Change (PRSC)**, present in the Calibration level. The factory default for the password code is 1111.

Protection of the access code

The protection system built into the controller blocks for 10 minutes the access to protected parameters after 5 consecutive frustrated attempts of guessing the correct password

Master Password

The Master Password is intended for allowing the user to define a new password in the event of it being forgotten. The Master Password doesn't grant access to all parameters, only to the Password Change parameter (**PRSC**). After defining the new password, the protected parameters may be accessed (and modified) using this new password.

The master password is made up by the last three digits of the serial number of the controller **added** to the number 9000.

As an example, for the equipment with serial number 07154321, the master password is 9 3 2 1.

PROGRAMS OF RAMP AND SOAK

This feature allows the creation of Ramp and Soak Setpoint Profiles (Programs). Up to **20 different profiles** with **9 segments** each can be programmed. Longer profiles of up to 180 segments can be created by linking 2 or more profiles together.

The figure below displays a profile model:

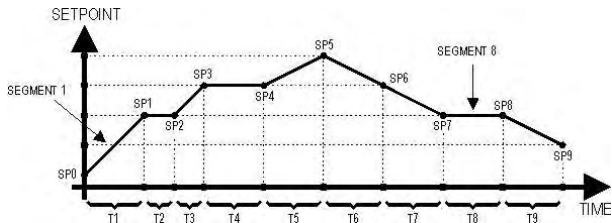


Figure 8 - Example of a Ramp and Roak.

Once a profile is defined and selected for execution (parameter **EP** in the operating level), the controller starts to generate the SP profile automatically in accordance with the elaborated program.

To execute a profile with fewer segments just program 0 (zero) for the time intervals that follow the last segment to be executed.

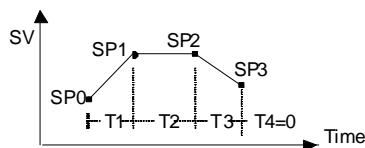


Figure 9 - Program example with few segments

The program tolerance defines the maximum deviation between PV and SP for the execution of the profile. If this deviation is exceeded, the program will be halted until the deviation falls to within the tolerance band.

Programming 0 (zero) in the "**Ptol**" parameter disables the program tolerance and the profile execution will continue regardless of the PV value (time priority as opposed to SP priority).

LINK OF PROGRAMS

It is possible to create a more complex program, with up to 180 segments, joining the 20 programs. This way, at the end of a program execution the controller immediately starts to run the next one, as indicated in the "**LP**".

To force the controller to run a given program or many programs continuously, it is only necessary to link a program to itself or the last program to the first.

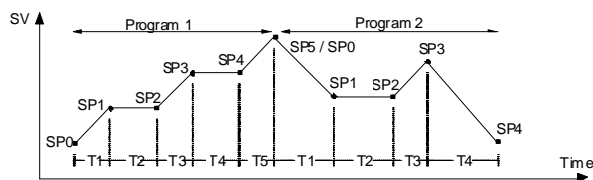


Figure 10 - Example of interlinked programs

EVENT ALARM

The Event Alarm function associates the alarms to specific segments of a program. The information of which alarms are to be activated or deactivated is given in parameters "**PE #**" to "**PE9**". Press the **▲** and **▼** keys until the desired alarm numbers are displayed.

The Event Alarm requires that the Alarm function be configured as "**r5**".

Notes:

1. If **Ptol** is different than zero, the controller will wait for the PV to reach the first program set point SP0 in order to start the program execution. Otherwise, it will start promptly.
2. Should any power failure occur, the controller resumes the program execution at the beginning of the segment that was interrupted.

DETERMINATION OF PID PARAMETERS

The determination (or tuning) of the PID control parameters in the controller can be carried out in an automatic way and auto-adaptive mode. The **automatic tuning** is always initiated under request of the operator, while the **auto-adaptive tuning** is initiated by the controller itself whenever the control performance becomes poor.

Automatic tuning: In the beginning of the **automatic tuning** the controller has the same behavior of an ON/OFF controller, applying minimum and maximum performance to the process. Along the tuning process the controller's performance is refined until its conclusion, already under optimized PID control. It begins immediately after the selection of the options FAST, FULL, RSLF or TGHT, defined by the operator in the parameter ATUN.

Auto-adaptive tuning: Is initiated by the controller whenever the control performance is worse than the one found after the previous tuning. In order to activate the performance supervision and **auto-adaptive tuning**, the parameter ATUN must be adjusted for SELF, RSLF or TGHT. The controller's behavior during the **auto-adaptive tuning** will depend on the worsening of the present performance. If the maladjustment is small, the tuning is practically imperceptible for the user. If the maladjustment is big, the **auto-adaptive tuning** is similar to the method of **automatic tuning**, applying minimum and maximum performance to the process in ON/OFF control.

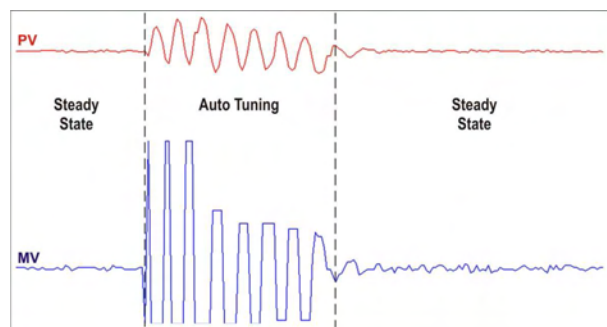


Figure 11 - Example of auto tuning

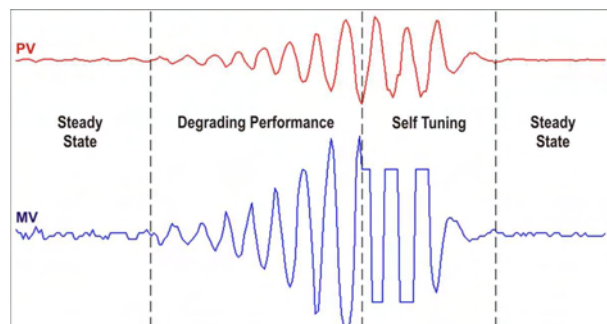


Figure 12 - Example of auto-adaptive tuning

The operator may select, through the ATUN parameter, the desired tuning type among the following options:

- OFF: The controller does not carry through **automatic tuning** or **auto-adaptative tuning**. The PID parameters will **not** be automatically determined **nor** optimized by the controller.
- FAST: The controller will accomplish the process of **automatic tuning** one single time, returning to the OFF mode after finishing. The tuning in this mode is completed in less time, but not as precise as in the FULL mode.
- FULL: The same as the FAST mode, but the tuning is more precise and slower, resulting in better performance of the P.I.D. control.
- SELF: The performance of the process is monitored and the **auto-adaptative tuning** is automatically initiated by the controller whenever the performance becomes poorer.
- rSLF: Accomplishes the **automatic tuning** and returns into the SELF mode. Typically used to force an immediate **automatic tuning** of a controller that was operating in the SELF mode, returning to this mode at the end.
- TGHT: Similar to the SELF mode, but in addition to the **auto-adaptative tuning** it also executes the **automatic tuning** whenever the controller is set in RUN=YES or when the controller is turned on.

Whenever the parameter ATUN is altered by the operator into a value different from OFF, an automatic tuning is immediately initiated by the controller (if the controller is not in RUN=YES, the tuning will begin when it passes into this condition). The accomplishment of this automatic tuning is essential for the correct operation of the auto-adaptative tuning.

The methods of **automatic tuning** and **auto-adaptative tuning** are appropriate for most of the industrial processes. However, there may be processes or even specific situations where the methods are not capable to determine the controller's parameters in a satisfactory way, resulting in undesired oscillations or even taking the process to extreme conditions. The oscillations themselves imposed by the tuning methods may be intolerable for certain processes. These possible undesirable effects must be considered before beginning the controller's use, and preventive measures must be adopted in order to assure the integrity of the process and users.

The "TUNE" signaling device will stay on during the tuning process.

In the case of PWM or pulse output, the quality of tuning will also depend on the cycle time adjusted previously by the user.

If the tuning does not result in a satisfactory control, refer to **Table 7** for guidelines on how to correct the behavior of the process.

PARAMETER	VERIFIED PROBLEM	SOLUTION
Proportional Band	Slow answer	Decrease
	Great oscillation	Increase
Rate of Integration	Slow answer	Increase
	Great oscillation	Decrease
Derivative Time	Slow answer or instability	Decrease
	Great oscillation	Increase

Table 9 - Guidance for manual adjustment of the PID parameters


MAINTENANCE

PROBLEMS WITH THE CONTROLLER

Connection errors and inadequate programming are the most common errors found during the controller operation. A final revision may avoid loss of time and damages.

The controller displays some messages to help the user identify problems.


 
 
 
 

MESSAGE	DESCRIPTION OF THE PROBLEM
----	Open input. No sensor or signal.
Err 1 Err 6	Connection and/or configuration errors. Check the wiring and the configuration.

Other error messages may indicate hardware problems requiring maintenance service. When contacting the manufacturer, inform the instrument serial number, obtained by pressing the key  for more than 3 seconds.

CALIBRATION OF THE INPUT

 
 

 
 
 
 
 
All inputs are factory calibrated and recalibration should only be done by qualified personnel. If you are not familiar with these procedures do not attempt to calibrate this instrument.

The calibration steps are:

- Configure the type of input to be calibrated.
- Configure the lower and upper limits of indication for the maximum span of the selected input type.
- At the input terminals inject a signal corresponding to a known indication value a little above the lower display limit **d)** Access the parameter "**inLc**". With the keys  and  adjust the display reading such as to match the applied signal. Then press the  key.
- Inject a signal that corresponds to a value a little lower than the upper limit of indication. **f)** Access the parameter "**inLc**". With the keys  and  adjust the display reading such as to match the applied signal. Then press the  key.

Note: When checking the controller calibration with a Pt100 simulator, pay attention to the simulator minimum excitation current requirement, which may not be compatible with the 0.170 mA excitation current provided by the N1200. .

CALIBRATION OF THE ANALOGICAL OUTPUT

- Configure I/O 5 for the current output to be calibrated, be it control or retransmission.
- In the screen "**ctrl**", program manual mode (**MAN**).
- Connect a current meter at the analog output.
- Enter the calibration cycle with the correct password.
- Select the screen "**ouLc**". Press the keys  and  for the controller to recognize the calibration process of the current output.
- Read the current indicated on the current meter and adjust the parameter "**ouLc**" to indicate this current value (use the keys  and 
- Select the screen "**ouHc**". Press the keys  and  for the controller to recognize the calibration process of the current output.
- Read the current indicated on the current meter and adjust the parameter "**ouHc**" to indicate this current value
- The key  or  in order to leave the screen confirm the calibration.

SERIAL COMMUNICATION

The controller can be supplied with an asynchronous RS-485 digital communication interface for master-slave connection to a host computer (master).

The controller works as a slave only and all commands are started by the computer which sends a request to the slave address. The addressed unit sends back the requested reply.

Broadcast commands (addressed to all indicator units in a multidrop network) are accepted but no reply is sent back in this case.

CHARACTERISTICS

- Signals compatible with RS-485 standard. MODBUS (RTU) Protocol. Two wire connection between 1 master and up to 31 (addressing up to 247 possible) instruments in bus topology. The communication signals are electrically insulated from the rest of the device;
- Maximum connection distance: 1000 meters.
- Time of disconnection for the controller: Maximum 2 ms after last byte.
- Selectable speed; 8 data bits; 1 stop bit; selectable parity (no parity, pair or odd);
- Time at the beginning of response transmission: maximum 100 ms after receiving the command.

The RS-485 signals are:

D1	D + B	Bi-directional data line.	Terminal 16
D0	D - A	Bi-directional inverted data line.	Terminal 17
	C	Optional connection that improves the performance of the communication.	Terminal 18
	GND		

CONFIGURATION OF PARAMETERS FOR SERIAL COMMUNICATION

Two parameters must be configured for using the serial type:

bAud: Communication speed.

Prty: Parity of the communication.

Addr: Communication address for the controller.

SPECIFICATIONS

DIMENSIONS: 48 x 48 x 110 mm (1 / 16 DIN)
..... Approximate Weight: 150 g

CUTOUT IN THE PANEL: 45.5 x 45.5 mm (+0.5 -0.0 mm)

POWER SUPPLY 100 a 240 Vac/dc ($\pm 10\%$), 50 / 60 Hz
Optionally: 24 Vac/dc $\pm 10\%$
Maximum consumption: 9 VA

ENVIRONMENTAL CONDITIONS:

Operation Temperature: 5 to 50 °C
Relative Humidity: 80% max. 30 °C
For temperatures above 30 °C, reduce 3% for each °C
Internal Use; Category of installation II, Degree of pollution 2;
altitude < 2000 m

INPUT T/C, Pt100, voltage and current (according to **Table 1**)

Internal Resolution: 32767 levels (15 bits)

Resolution of Display: 12000 levels (from - 1999 up to 9999)

Rate of input reading: up to 55 per second

Precision: .. Thermocouples **J, K, T, E:** 0.25% of the *span* ± 1 °C

..... Thermocouples **N, R, S, B:** 0.25% of the *span* ± 3 °C

..... Pt100: 0.2% of the *span*

..... 4-20 mA, 0-50 mV, 0-5 Vdc: 0.2% of the *span*

Input Impedance: 0-50 mV, Pt100 and Thermocouples: >10 M Ω

..... 0-5 V: >1 M Ω

..... 4-20 mA: 15 Ω (+2 Vdc @ 20 mA)

Measurement of Pt100: Three wire type, ($\alpha=0.00385$)

with compensation for cable length, excitation current of 0.170 mA.

All input and output types are factory-calibrated. Thermocouples according to standard NBR 12771 / 99, RTD's NBR 13773 / 97;

ANALOGICAL OUTPUT (I/O5): 0-20 mA or 4-20 mA, 550 Ω max.

31000 levels, insulated, for control or retransmission of PV and SP

CONTROL OUTPUT:

2 Relays SPST-NA (I/O1 and I/O2): 1.5 A / 240 Vac, general use

..... 1 Relay SPDT (I/O3): 3 A / 250 Vac, general use

..... Voltage pulse for SSR (I/O5): 10 V max. / 20 mA

..... Voltage pulse for SSR (I/O3 and I/O4): 5 V max. / 20 mA

INPUT OF REMOTE SP: Current of 4-20mA

This characteristic requests an external resistor of 100 R, connected to the terminals 9 and 10 at the controller's back panel.

ELECTROMAGNETIC COMPATIBILITY: EN 61326-1:1997 and EN 61326-1 / A1:1998

SAFETY: EN61010-1:1993 and EN61010-1 / A2:1995

SPECIFIC CONNECTIONS FOR TYPE FORK TERMINALS OF 6.3 MM;

FRONT PANEL: IP65, POLYCARBONATE - UL94 V-2; CASE: IP30, ABS+PC UL94 V-0;

PROGRAMMABLE CYCLE OF PWM 0.5, UP TO 100 SECONDS;

STARTS UP OPERATION AFTER 3 SECONDS CONNECTED TO THE POWER SUPPLY;

IDENTIFICATION

N1200 -	3R -	485 -	24V
A	B	C	D

A: Model of Controller.

N1200;

B: Optional of I/O:

Nothing shown (basic version, without the optional items below);

3R (version with SPDT Relay available in I/O3);

DIO (version with I/O3 and I/O4 available);

HBD (version with Burnt-Out Resistance detection);

C: Digital Communication:

Nothing shown (basic version, without serial communication);

485 (version with serial RS485, Modbus *protocol*)

D: Electric Power Supply:

Nothing shown (basic version, power from 100 to 240 Vac);

24V (version with power of 24 Vac/dc);

WARRANTY

The manufacturer assures the owner of his equipment, identified through the purchase invoice, a warranty of one (01) year under the following terms:

- The warranty period will begin on the issue date of the invoice.
- Within the warranty period the labor and the components applied in repairs of defects occurred under normal use conditions will be free of charge.
- For possible repairs, please send the equipment for repair, together with the invoice for shipping purpose, to the address of our factory.
- Transport expenses and risks will run for account of the owner.
- Repairs of defects caused by mechanical impacts or exposure of the equipment to conditions inappropriate for the use, will be charged even within the warranty period.

NOVUS
www.novusautomation.co.uk